


Ignition Setup:

Output Type : Constant Charge
 Coil Charge Time : 3.5(ms)
 Output Edge : Falling

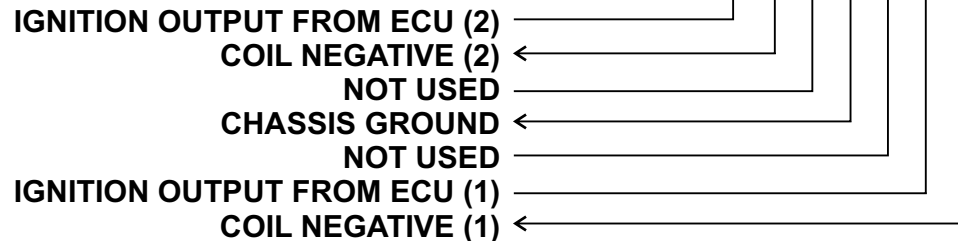

NOTES:

This module requires the ECU to determine coil dwell time.

The coil charge starts as the Ignition Output from the ECU goes high.

The coil spark event happens when the Ignition Output from the ECU goes low.

This Ignition Module needs good heat sinking using heatsink paste.